



PARTS LIST

Item No.	Part No.	Qty.	Description
1	02796	1	Sump Pump Head
2	04122	1	Volute Assembly, Incl. item 27
3	02799	2	Gear
4	03750	1	O-Ring, 2 5/16 x 2 1/2 x 3/32 ☉
5	03747	1	Impeller ●
6	03746	1	Wear Plate
7	01208	4	Capscrew, Hex Head 3/8 - 16 UNC x 3 1/2
8	02433	1	Nut, Conical ●
9	02784	1	Screen
10	02815	1	Impeller Cover
11	00635	1	Impeller Key ●
12	02446	7	Capscrew Hex Soc., Stnls. 1/4 - 20 UNC x 5/8
13	01241	1	Quad Ring, 11/16 x 7/8 x 3/32 ☉
14	02797	1	Drive Shaft Key ●
15	02802	1	Drive Shaft
16	03249	10	Capscrew, Hex Soc. Hd., Stnls. 1/4 - 20 UNC x 2 1/2
17	02444	1	Bearing
18	02808	1	Cotter Pin, 1/8 x 1 ☉
19	03136	1	Plug
20	02810	1	Castle Nut, 7/16 - 20 UNF
21	02477	A/R	Washer ●
22	00936	2	Adapter
23	01312	A/R	Shim, .003
	01313	A/R	Shim, .005
	01314	A/R	Shim, .010
	01315	A/R	Shim, .025
24	03953	1	Spacer ●
25	03791	1	GPM Sticker 10-16
26	06799	1	O-Ring, 2 3/4 x 2 7/8 x 1/16 ☉
27	04121	2	Bushing
28	03147	1	Nameplate Sticker
29	05152	1	Stanley Sticker
	15875		Tool Operator Warning Tag (Not Shown)

NOTE: Use Part Number and Part Name When Ordering

- Denotes Part in Repair Kit
- ☉ Denotes Part in Seal Kit

REPAIR AND SEAL KIT DATA

Part No.	Qty.	Description
Repair Kit Part No. 03266		
00635	1	Impeller Key
02433	1	Conical Nut
02477	1	Washer
02797	1	Drive Shaft Key
03747	1	Impeller
03953	1	Spacer
Seal Kit Part No. 03267		
01241	1	Quad Ring
02808	1	Cotter Pin
03750	1	O-Ring
06799	1	O-Ring